

## Ceiling, Wall, (or Counter Mount)

The ticket display board is intended as a way to show the games in areas where the use of conventional lottery dispensers is difficult or not possible. It also offers a way to add exposure to the existing units. A ceiling or wall hung display allows people in line to view the games before reaching the clerk.

Remove the display board from the frame and place the display tickets in the clips mounted on the board and replace it in the frame. The clear plastic front is replaceable if scratched.



The ceiling hung unit is the most popular way to use the display board.

- Hardware for use with “drop ceilings” is supplied.
- Use with a remote base or as a display with other dispensers.
- All hardware provided; chains, hooks, t-bar ceiling hardware.
- In stores where there is no “drop ceiling” a contractor should be used to securely mount the display to the ceiling to eliminate the possibility of the unit falling.
- Two chains are attached to the display. Hook the chains from the ceiling to these chains to get best visibility for the customers.

Removing the mounting hardware for the ceiling hung unit allows the display board to be mounted on the wall. Sheet rock screws will hold the unit in either wall board or plywood.

Remove the display board and replaceable front to screw the frame to the wall.




Counter mounted displays use a easel type mount.

Order the easel a separate add-on.

Display board removes from the top of the unit.

T-bar ceiling clamp for c-store drop ceilings

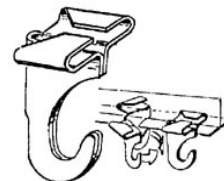

**TAKE-A-TICKET, INC. 800.254.4295 fax: 541.967.8415 [info@tatinc.com](mailto:info@tatinc.com)**